

WHITETAIL SUPPLY & FEED, LLC

CAMERA PROGRAM SETUP

2006-2007

Sony DSC-P32 Camera:

- **PROGRAM**
EV: **OEV (FOR IR Choose +1.0EV)**
Focus: **Infinity, (For IR Choose MULTI or AUTO)**
White Balance: **Auto**
ISO: **Auto (For IR choose 400)**
P. Quality: **Standard**
REC mode: **Normal**
Flash Level: **High**
P. Effect: **Off**
 - **Setup Camera**
Moving Image MPEG movie
Date/Time: **Day & Time**
Red Eye reduction: **OFF**
AF Illuminator: **OFF**
 - **Memory Stick Tool**
Format: **OK**
File Series: **Series**
Create REC Folder: **OK**
Change REC Folder: **101**
- Setup 1**
Power Save: **Off**
LCD Brightness: **Normal**
LCD Backlight: **Normal**
Beep: **OFF**
Language: **English**
Clock Set: **Enter your date & time**

Sony DSC-P41 Camera:

- **MENU~PROGRAM**
EV: **OEV (FOR IR Choose +1.0EV)**
Focus: **Infinity, (For IR Choose MULTI or AUTO)**
White Balance: **Auto**
ISO: **Auto (For IR choose: 400)**
P. Quality: **Standard**
REC mode: **Normal**
Flash Level: **+**
P. Effect: **Off**

- **Setup Camera**
AF Mode: **Single**
Digital Zoom: **Smart**
Date/Time: **Day & Time**
Red Eye Reduction: **OFF**
AF Illuminator: **OFF**
Auto Review: **OFF**

Memory Stick Tool

Format: **OK**
Create REC Folder: **OK**
Change REC Folder: **101**

Setup 1

Power Save: **(Not available)**
LCD Backlight: **Normal**
Beep: **OFF**
Language: **English**

Setup 2:

File Number: **Reset**
USB Connect: **Normal**
Clock Set: **Set Date & Time**

Sony DSC-S600 Camera:

Program

- 0EV **FOR IR Choose +1.0EV**
- MULTI AF
- AUTO WHITE BAL
- AUTO ISO
- FINE P. QUALITY
- NORMAL REC MODE
- + FLASH LEVEL
- P.EFFECT: OFF
- NORMAL SATURATION
- + CONTRAST
- + SHARPNESS
- NORMAL REC MODE

Next is Setup Camera 1:

- AF Mode: **Single**
- Digital Zoom: **Off**
- Date/Time: **Day/Time**
- Red Eye Reduction: **Off**
- AF Illuminator: **Off**
- Auto Review: **Off (Important saves battery power)**

Next is Camera 2:

- Enlarged Icon: **Off**

Next is Setup 1:

- Beep: **Off**
- Language: **English**
- Initialize: **OK**

Then all you have left to do is setup the **Date & Time** if you did not do that during the original boot up of the camera.

Be sure your camera is set to picture taking mode 'center' or movie making mode 'right position'. And push the flash button until the flash icon is no longer on the LCD screen, then push the LCD lower left button to shut the LCD off while in the field to save battery power. **Be sure that you turn your LCD screen off.**

S40 Menu Setting:

Program:

- EV= default **OEV**
- Focus: **Multi AF**
- White Bal: **Auto**
- ISO: **Auto**
- P.Quality: **Standard**
- Rec mode: **Normal**
- Flash level: **All the way up to +**
- P.Effect: **Off**
- Saturation: -
- Contrast: -
- Sharpness: **Normal**

Next is Setup Camera 1:

- AF Mode: Single
- Digital Zoom: Off
- Date/Time: Day/Time (Stamps date & time on picture)
- Red Eye Reduction: Off
- AF Illuminator: Off
- Auto Review: Off

Next is Camera 2:

- Enlarged Icon: Off

Next is Setup 1:

- Beep: Off
- Language: English
- Initialize: OK

Then all you have left to do is setup the **Date & Time** if you did not do that during the original boot up of the camera.

Be sure your camera is set to picture taking mode 'center' or movie making mode 'right position'.

Be sure that you turn your LCD screen off

Samsung A402 Camera:

Menu:

Program:

Resolution: 2272 x 1704 (Your option)

Quality: Normal

Metering: Spot

Shooting: Single

Effect: Normal (B&W for IR or option)

P.Frame: Off

Sharpness: Normal

My Set: (If you want to save different program settings) SKIP

My Cam: S.Image OFF & S.Beep OFF

Setup Menu:

File: Series

Pwr SAVE: OFF

Language: English

Format: No

Date: Enter Date

Time: Enter Time

Date Type: Enter layout of the imprinted date

Imprint: Displays date/time on image: Choose D & Time

Beep: Off

USB: Computer

Q.View: OFF

Reset: NO ---- Only if you need to reset to factory settings.

Flash Button: *located on the left side of the menu wheel*

- Lightning Bolt / A “(A)” means auto adjust, if the camera detect little light it will activate the flash.