

Samsung A402 Camera Setting:

Menu

Program

Resolution: 2272 x 1704 (Your option)

Quality: Normal

Metering: Spot

Shooting: Single

Effect: Normal (B&W for IR or option)

P.Frame: Off

Sharpness: Normal

My Set: (If you want to save different program settings) SKIP

My Cam: S.Image OFF & S.Beep OFF

Setup Menu:

File: Series

Pwr SAVE: OFF

Language: English

Format: No

Date: Enter Date

Time: Enter Time

Date Type: Enter layout of the imprinted date

Imprint: Displays date/time on image: Choose D & Time

Beep: Off

USB: Computer

Q.View: OFF

Reset: NO ---- Only if you need to reset to factory settings.

Flash:

Lightning Bolt / A “(A)” means auto adjust, if the camera detect little light it will activate the flash.

Here is the way we have the PIX LE Dip Switches

Setup

1 Min delay

Dbl Pic OFF

24 Hour

Dip **6 & 7 Up/On**, Dip 1,2,3,4,5, 8, are all down/off.

Dip **9 Up/On** Kills power to the RED LED

Dip **10 Down/Off** Kills power to the GREEN activity LED

Here is the way we have the SSS: Snap Shot Sniper

White to Pin 1 S (Shutter) Right front tab on shutter button
Black to Pin 2 G (Shutter Common) Left rear tab on shutter button
Red to Pin 3 O (Power) Left rear tab on the Power Switch

Green to Lifted leg on the N433 Chip (Power Common) Right front tab on Power Switch

Setup

1 Min delay
Dbl Pic OFF
Sensativity: High
Day/Night 24 Hour
Walk Test Off

Advanced Enter:

Cam/Type On/Off-1
Refresh 30 min.
Shutter 2 Sec